

Operator's manual



Tipper trailer CR2260/PR2150

* the tipper trailer is shown with options

Introduction

Dear Customer

Congratulations with your Egholm product

The Tipper trailer is a Danish designed and manufactured product, which offers a very flexible way of maintaining outdoor areas.

Optimal use of your Tipper trailer

To ensure optimal performance of your Tipper trailer, please read this manual carefully before using the machine. Failure to do so can result in personal injury and damage to the machine.

Safety

The Tipper trailer is equipped with various devices to ensure optimal operational safety, both for the user and the surroundings. We therefore ask you to pay particular attention to Safety section 1.1. The machine must only be serviced by professionals.

The Tipper trailer is intended only for professional use, and on delivery, the user will receive thorough instructions in the use of the machine and will thus become a competent operator. Do not lend the machine to anyone who has not been thoroughly trained and has not read this manual carefully.

The operator's manual should be considered as a permanent part of the machine and so must remain with it if the machine is sold.

Warnings

Some items in this operator's manual are marked with this warning symbol. The warning indicates areas where extra care has to be taken to avoid personal injury or damage to the machine and its accessories. The warning also shows what you should pay special attention to.



Reservations

As it is Egholm policy to make continuous improvements, we reserve the right to alter the specifications and equipment at any time without notice. Egholm accepts no liability for errors or shortcomings in the operator's manual.

Contact us

Should you have questions of any kind regarding your new Egholm product, do not hesitate to contact Egholm.

Best regards

Egholm A/S · Transportvej 27 · DK-7620 Lemvig

T. +45 97 81 12 05 · F. +45 97 81 12 10

e-mail: info@egholm.dk · www.egholm.eu



Egholm app - easy access to useful material

Download our Egholm app, enter the serial number of your machine and possibly add attachments, and get access to videos, manuals, technical specifications and much more.

If you agree to receive notifications, you will be notified about product and service information, offers etc. The app is available for Apple and Android mobile phones.

Contents

General information	5
1.1 Safety	5
1.2 EC Declaration of Conformity for Machinery	6
1.3 Technical data	7
Operator's manual	9
2.1 Assembly / Disassembly	9
2.2 Connect the tipper trailer - PR2150	10
2.3 Start-up - PR2150	11
2.4 Connect the tipper trailer - CR2260.	12
2.5 Start-up - CR2260	13
Service and maintenance	15
3.1 Service and maintenance	15
Conditions	17
4.1 Warranty	17
4.2 Complaints	18
4.3 Disposal	18
Notes	19

Ensure that the hydraulic couplings are clean before attaching the Tipper Trailer, as this protects the hydraulic system.

General information

**Honest
Machines**

1.1 Safety



Make sure no one is standing close to the machine while it is in use

Make sure that no one is near the machine while it is in use as there is a danger of crushing.



Attention

As it is articulated, the rear end of the machine swings out when turning.

Make sure that no one is standing near the machine while it is in use.



Avoid crushing fingers

Keep your hands and fingers away from areas where there is a danger of crushing.



Avoid roll-overs

Do not drive the machine in a place where it can slide, tip or roll.

Do not drive along slopes with an inclination of more than 5°.

General information

1.2 EC Declaration of Conformity for Machinery

Manufacturer: **Egholm A/S**
Address: **Transportvej 27 · DK-7620 Lemvig**
Telephone: **+45 97 81 12 05**

hereby declares that

Machine: **Tipper trailer**
Type: **TV600**

· has been manufactured in conformity with the provisions of the Machinery Directive, Directive 2006/42/EU.

Any alteration, rebuilding or addition of implements, accessories or other equipment not manufactured by Egholm automatically results in the cancellation of type approval, CE approval, any other approval, as well as any warranty on machine and attachments.

Unless otherwise agreed in writing between the operator, customer and Egholm, Egholm is the data originator (data originator) of all data generated by the machine and attachments during use.

Place: Lemvig

Date:

Signature:



Rainer Flanz, R&D Manager

General information

1.3 Technical data

Dimensions

Length (L).....	2150 mm
Width (W).....	1050 mm
Hight (H).....	800/1200 mm

Storage dimensions

Technical data

Type description.....	TV600
Own weight.....	127 kg

Attention

Specifications may be changed without prior notice.

Operator's manual

**Honest
Machines**

2.1 Assembly / Disassembly

Assemble the Tipper trailer.

1. The Tipper trailer is delivered with 2 hydraulic hoses and a coupling.
2. Mount the coupling on the right hose, depending on the tractor model, and mount the hydraulic hose on the Tipper trailer.

All Park Ranger models:

Use the longest hose.

All City Ranger 2200/2250/2260 models:

Use the shortest hose.



Coupling mounted on the longest hose.



Coupling mounted in the straight end, on the shortest hose.



Hose mounted on the trailer.

Operator's manual - Park Ranger 2150

2.2 Connect the tipper trailer - PR2150

Connect the Tipper trailer.

1. Mount the bracket, that comes with the tipper trailer (Picture 1)
2. Connect the tipper trailer to the trailer coupling. (Picture 2)
3. Connect the hydraulic hose, to the hydraulic coupling. (Picture 2+3)
4. Connect electrical plug for lights if available. (Picture 2)
5. Make sure to set the nose wheel in upper position. (Picture 4)



Mount the hose bracket, that comes with the Tipper trailer.



Connect trailer coupling, hydraulic hose (and electrical plug, if available).



Connect the hydraulic hose.
Run the hose through the bracket.




Make sure, to set the nose wheel in upper position.

Operator's manual - Park Ranger 2150

2.3 Start-up - PR2150

1. Start the machine.
2. Use handle C, to tip and lower, the trailer.
(Picture 1)

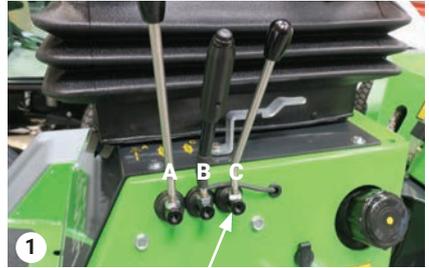

Use handle C to tip and lower the trailer.

Operator's manual - City Ranger 2260

2.4 Connect the tipper trailer - CR2260

Connect the Tipper trailer.

1. Connect the tipper trailer to the trailer coupling. (Picture 1)
2. Connect the hydraulic hose, to the hydraulic coupling. (Picture1)
3. Connect electrical plug for lights if available. (Picture 1)
4. Make sure to set the nose wheel in the upper position. (Picture 2)



Connect trailer coupling, hydraulic hose (and electrical plug, if available).




Make sure, to set the nose wheel in upper position

Operator's manual - City Ranger 2260

2.5 Start-up - CR2260

1. Start the machine.
2. Use handle C sideways, to tip and lower, the trailer. (Picture 1)

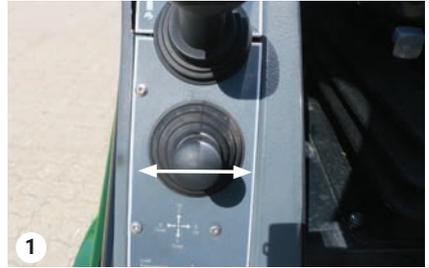

Service, maintenance and options

**Honest
Machines**

Service and maintenance

3.1 Service and maintenance

1. Check tire pressure 1,6 bar or 24 psi.
2. Grease greasing points in the wheels.

Options

E90301211 Side extensions for Tipper Trailer.

E90301251 Lighting for Tipper Trailer.



Grease greasing points in the wheels.

Conditions

**Honest
Machines**

4.1 Warranty

date of purchase.

In case of errors or defects on the machine within the warranty period, Egholm will carry out the necessary repairs at no charge to the customer, including materials and working hours, in accordance with the terms and conditions listed below.

The scope of warranty

1. The Egholm warranty is only valid on presentation of the original receipt supplied with model description, serial number and date of purchase.
2. Regular checks, adjustments, services and technical alterations are not covered by the warranty.
3. All inquiries concerning the warranty are to be addressed to the place where the machine was purchased.
4. This warranty does not cover faults and defects which cannot be traced back to defects in material or production errors.
5. This warranty is valid for persons who have legally acquired the machine within the warranty period.
6. In the event of failure to perform and substantiate service in accordance with the applicable instructions, Egholm reserves the right to reject any claim made within the warranty period.
7. Egholm reserves the right to make improvements and design-related alterations to the machine without being obliged to modify previously delivered models in relation hereto.

The warranty does not cover

- Wear and tear, accidents, damage to the attachment caused by operating errors, changes to the construction of the machine or use of non-Egholm spare parts or attachments.
- Machines with illegible serial numbers.
- Damage caused by force majeure such as lightning, flood, fire, war, civil disturbance, etc, or other causes over which Egholm has no control.

Conditions

4.2 Complaints

All inquiries regarding the machine should be made at the distributor from whom the machine was purchased. This applies to inquiries concerning normal use, service, maintenance and spare parts as well as any complaints.

We wish you many years of safe and satisfied use of your machine.

Best regards
Egholm A/S

4.3 Disposal

When, in many years from now, your Tipper trailer has reached the end of its working life, it should be disposed of in a responsible manner that conforms with relevant disposal regulations.

1. Used hydraulic oil is to be disposed of at an approved waste disposal facility or site.
2. Remove the plastic and rubber parts and dispose of them in accordance with the applicable environmental legislation.
3. After the aforementioned parts have been removed, the machine is ready to be handed over to a local approved scrap merchants.

Honest Work.

Egholm A/S
Transportvej 27
7620 Lemvig, Denmark
T.: +45 97 81 12 05
www.egholm.eu - info@egholm.dk