

Operator's manual



**Hedge cutter
City Ranger 2260-2250**

Introduction

Dear Customer

Congratulations with your new Egholm product

The City Ranger 2250/2260 is a Danish designed and manufactured product, which offers a very flexible way of maintaining outdoor areas.

Optimal use of your City Ranger 2250/2260 Hedge cutter

To ensure optimal performance of your City Ranger 2250/2260 Hedge cutter, please read this manual carefully before using the machine. Failure to do so can result in personal injury and damage to the machine.

Safety

The Hedge cutter is equipped with various devices to ensure optimal operational safety both for the user and the surroundings. We ask you to pay particular attention to section 1.1 Safety. The machine must only be serviced by professionals.

The Hedge cutter is designed only for use by professionals. On delivery, the user will receive thorough training to become a competent operator. Do not lend to anyone who has not been thoroughly trained and who has not read this manual carefully. The operator's manual should be considered as a permanent part of the machine and must remain with it if the machine is sold.

Warnings

Some items in this operator's manual are marked with this warning symbol.

The warning indicates areas where extra care has to be taken to avoid personal injury or damage to the machine and its accessories. The warning also shows what you should pay special attention to.



Reservations

As it is the Egholm policy to make continuous improvements, we reserve the right to alter the machine's specifications and equipment at any time without notice. Egholm accepts no liability for errors or omissions in the operator's manual.

Contact us

Do not hesitate to contact Egholm should you have questions of any kind regarding your new Egholm product.

Best regards

Egholm A/S · Transportvej 27 · DK-7620 Lemvig

T. +45 97 81 12 05 · F. +45 97 81 12 10

E-mail: info@egholm.dk · www.egholm.eu



Egholm app - easy access to useful material

Download our Egholm app, enter the serial number of your machine and possibly add attachments, and get access to videos, manuals, technical specifications and much more.

If you agree to receive notifications, you will be notified about product and service information, offers etc. The app is available for Apple and Android mobile phones.

Contents

General information	5
1.1 Safety	5
1.2 EC Declaration of Conformity	6
1.3 Technical data	7
Operator's manual	9
2.1 Assembly / Disassembly	9
2.2 Before start-up	12
2.3 Start-up	13
2.4 Setting trimmer position	15
Service and Maintenance	19
3.1 Cleaning	19
3.2 Maintenance	19
Conditions	21
4.1 Warranty	21
4.2 Complaints	22
4.3 Disposal	22

The Hedge cutter operates quickly and effectively on hedges and bushes up to 2,5 metres in height and on branch thicknesses up to 20 mm. The Hedge cutter is fixed at the front of the machine and controlled from the cab.

The Hedge cutter can easily be adjusted to trim horizontally, vertically or at any angle required. During transport, the Hedge cutter is folded to save as much space as possible.

Attach and detach the Hedge cutter in less than a minute with no tools required.

When detached, the Hedge cutter rests on four wheels and is extremely easy to store.

General information

**Honest
Machines**

General information

1.1 Safety



N.B

As it is articulated, the rear end of the machine swings out when turning. Make sure that no one is standing near the machine while it is in use. (Picture 1)



Make sure no one is standing close to the machine while it is in use

To avoid personal injury people must stay clear of the cutting bar when it is being lowered and tilted.



Cover the cutting bar when the Hedge cutter is not in use and during transport

Remove the cover immediately prior to use. (Picture 2)



In the case of maintenance or repair, always switch off the motor and the electric main switch

The attachment motor must be stopped before any adjustment, maintenance or repair can be carried out on the Hedge cutter.




Avoid roll-overs!


Do not drive the machine in a place where it can slide, tip or roll. Do not drive on slopes with an incline of more than 10°. The tyre pressure must be checked and adjusted to 1.5 bar (22 psi) when the Hedge cutter is attached. Lower tyre pressure increases the risk of roll-overs. (Picture 3)



Only transport the Hedge cutter when packed in transportation position. (Picture 4)

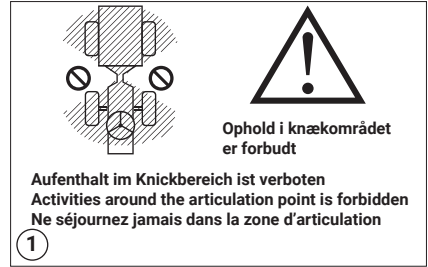

Prevent people from standing in the working area

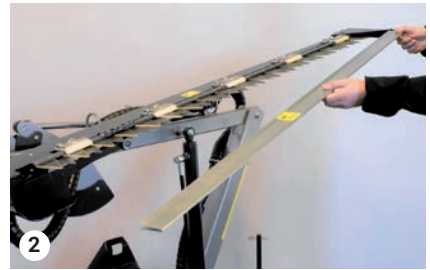

Protective covering



Do not drive on slopes with an incline of more than 10°



4

Hedge cutter in transportation position

General information

1.2 EC Declaration of Conformity

Manufacturer: **GMR maskiner a/s**
Address: **Saturnvej 17 DK-8700 Horsens**
Telephone: **+45 75 64 36 11**


hereby declares that

The machine: **Cutter arm and hedge cutter**
Model: **GMR Maskiner A/S**
Type: **Arm: Trim 2260**
Knife: MB 130-3

has been manufactured in conformity with the provisions of the Machinery Directive, Directive 2006/42/EC

Any alteration, rebuilding or addition of implements, accessories or other equipment not manufactured by Egholm automatically results in the cancellation of type approval, CE approval, any other approval, as well as any warranty on machine and attachments.

Unless otherwise agreed in writing between the operator, customer and Egholm, Egholm is the data originator (data originator) of all data generated by the machine and attachments during use.

Place: Lemvig
Date: _____
Signature: 
Rainer Flanz, FoU-chef

General information

1.3 Technical data

Dimensions	Attached	Storage dimensions
Length (L)	3,500 mm	1,000 mm
Width (W)	1,600 mm	1,600 mm
Height (H) with cab	1,960 mm	1,450 mm
Height (H) with roll bar	2,000 mm	

Technical data

Type	TRIM 2260 / MB130-3
Max. horizontal reach	2,500 mm
Cutting width	1,300 mm
Horizontal cutting height	300 mm - 2,100 mm
Vertical cutting height	0 mm - 3,200 mm
Angle for cutting bar	270°
Max. branch thickness	20 mm
Operating speed	1-3 km/h
Weight	135 kg
Hydraulic oil	Texaco Rando HDZ 68 or equivalent

N.B

Specifications may be changed without prior notice.


Information plate

(Picture 1+2)



1

Type plate
Arm

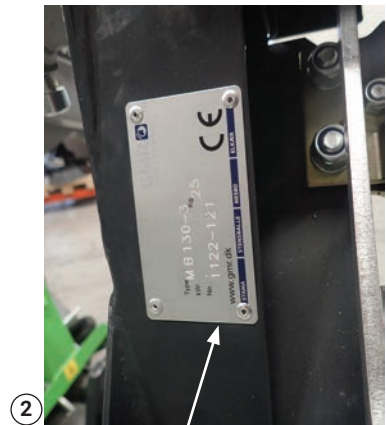

2

Type plate
Cutter

Operator's manual

**Honest
Machines**

2.1 Assembly / Disassembly

Delivery

The arm and cutter are delivered on one pallet.
(Picture 1)

Unpack both parts and place them on a plan surface

1. Check the arm, the top hydraulic cylinder must be in out position (Hole in square pipe pointing up and down.)
(Picture 2+3)

2. Mount the cutter knife in the square hole, put in the M10 bolt (Picture 4).
Mount and tighten the bolt with M10 nut.
Tighten the allen bolt and check the cutter can not move at all from the cutter arm square pipe. (Picture 5)


3. Mount the hydraulic hoses. The hoses must be guided below the cutter arm square pipe. (Picture 6)

The Hedge cutter is now ready to mount on the Basic machine.




①

The arm and cutter are delivered on one pallet

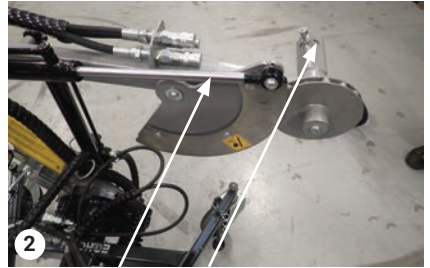

②

Hole in square pipe pointing up and down
Cylinder in out position

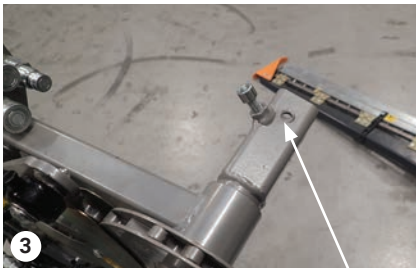

③

Hole in square pipe pointing up and down



④

Mount the cutter knife in the square hole,
M10 bolt



⑤

Tighten the allen bolt. Check the cutter can not move at all from the cutter arm square pipe.



⑥

The hydraulic hoses must be guided below the cutter arm square pipe

Operator's manual

2.1 Assembly/Disassembly - continued

1. The locking handle on the A-frame of the basic machine must be in the unlocked position. (Picture 1)

Tips!

Raise the Hedge cutter front wheels free of the ground and lower the support struts, so that the Hedge cutter A-frame is angled back. This makes it much easier to 'catch' the A-frame when attaching. (Picture 2)

2. Drive the machine right up to the A-frame of the Hedge cutter so the A-frames fit into each other. (Picture 3)

3. Raise the A-frame by pulling the joystick back until the Hedge cutter is suspended, i.e. free of the ground. (Picture 4)

4. Stop the machine.



Unlocked A-frame



Support strut lowered



Locking



Pull joystick back

2.1 Assembly/Disassembly - continued


5. Lock the Hedge cutter in place with the locking handle on the A-frame. The locking handle can only be engaged when the machine has been stopped. (Picture 1)

6. Pull out pin on each wheel support strut. Raise support struts all the way and remount the pins. (Picture 2)

7. Removal:
Follow the procedure for fitting in reverse order. To avoid accidents when detaching the Hedge cutter, always make sure the machine is on a level and stable surface.



Lock A-frame

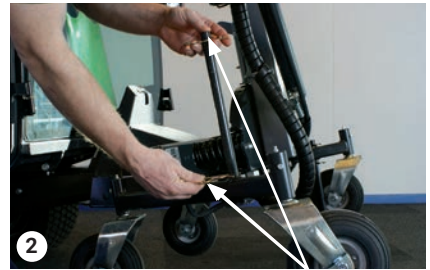

Support strut up

Pin

Operator's manual

2.2 Before start-up

During transport

Lock the Hedge cutter in the raised position using the transport lock.

This prevents the attachment from lowering during transport.

How to use the transport lock

Move the handle to the uppermost position. Raise the A-frame by pulling the joystick back. As the A-frame lifts, the transport lock is automatically activated. (Picture 1)


How to unlock the transport lock

Unhitch the handle and lift the A-frame to the highest position. The attachment can now be lowered again. (Picture 2)



Warning

Always make sure the hedge cutter is folded to minimum size before transportation.

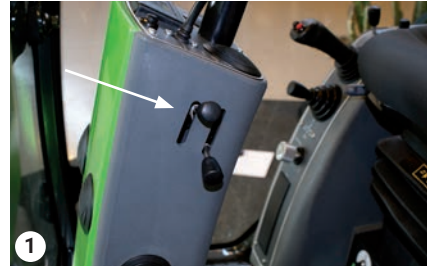

Transport lock in locked position



Transport lock in unlocked position



Transport position

2.3 Start-up


1. Remove the protective cover from the cutting bar. (Picture 1)
2. Start the machine.
3. Start the Hedge cutter: Switch on with the front PTO switch. It is recommended that the machine rpm is adjusted to 2500. (Picture 2)
4. Move the joystick forward to lower the Hedge cutter and align the wheels with the surface. (Pictures 3+4)



Protective covering



PTO front and throttle

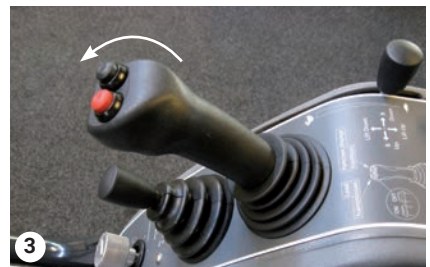

Joystick forward



Wheels on surface

Operator's manual

2.3 Start-up - continued

Tips!

Activate the weight distribution (red button) if the surface is soft. Weight distribution is adjusted using the control knob. (Picture 1)



N.B

Make sure no one is standing close to the machine when it is in use.



Weight distribution

2.4 Setting trimmer position

Set the trimmer position by moving the joystick to the left or right, pressing the black button on the joystick at the same time. (Picture 1)

Hedge trimming on the left of the machine

1. Press and hold the black button and move the joystick to the right. The arm now moves vertically. (Picture 2)

2. Press and hold the black button and move the joystick to the left. The arm now moves out to the left. (Picture 3)

3. Move the joystick to the left. The end of the cutting bar now moves up. (Picture 4)

Horizontal/vertical hedge trimming to the left


1. Move the joystick to the left until the cutting bar is raised in the horizontal/vertical position

or

2. Move the joystick to the right until the cutting bar is lowered in the horizontal/vertical position

3. To trim at higher horizontal/vertical positions: Press and hold the black button and move the joystick to the right. The arm moves up. Repeat positions as described in points 1 + 2.


4. To trim at lower horizontal/vertical positions: Press and hold the black button and move the joystick to the left. The arm moves down. Repeat positions as described in points 1 + 2.

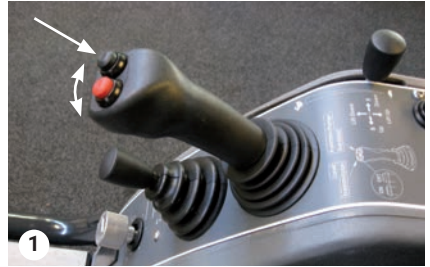

Joystick right - left and black button



Arm up

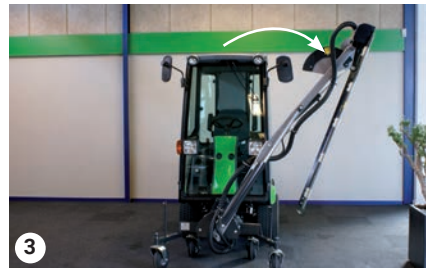

Arm down



Cutting bar up

Operator's manual

2.4 Setting trimmer position - continued

Change from left to right side of machine

1. Move the joystick to the left.

The end of the cutting bar now moves down. Do not stop the machine until the cutting arm end is on the right. (Picture 1)

2. Move the boom from left to right position.

Free the locking pin by turning the handle out to 90°. The boom can now be tilted to the right side and locked. (Picture 2+3)

Tips!

Small paths

If a small path has to be trimmed, tilt the boom all the way over to the opposite side. The cutting bar remains close to the machine.

Tips!

Reach

If a long side-reach is required, tilt the boom to the side where trimming is to be done.

3. Press and hold the black button and move the joystick to the left. The arm now moves to the right. (Picture 4)




Cutting bar on right side



Boom adjustment



Locking pin

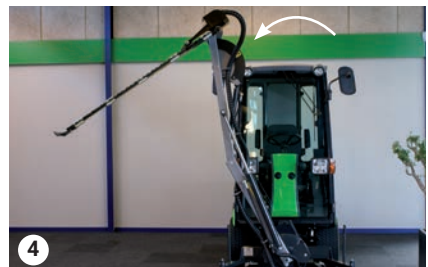

Arm to right

2.4 Setting trimmer position - continued

Horizontal/vertical hedge trimming on the left side

1. Move the joystick to the right until the cutting bar is raised in the horizontal/vertical position

or

2. Move the joystick to the left until the cutting bar is lowered in the horizontal/vertical position

3. To trim at higher horizontal/vertical positions: Press and hold the black button and move the joystick to the right. The arm moves up. Repeat positions as described in points 1 + 2

4. To trim at lower horizontal/vertical positions: Press and hold the black button and move the joystick to the left. The arm moves down. Repeat positions as described in points 1 + 2

Tips!

Trim hedges and bushes from below, i.e. with the cutting bar turned with the outer part down, so that the skid just touches the ground. Start trimming. The cutting bar is then raised higher up the hedge, so that the same section is trimmed all the way to the top. (Picture 1)

Operating speed

Depending on the conditions, an operating speed of 1–3 km/h is recommended.



Skid

Service and maintenance

**Honest
Machines**

Service and Maintenance

3.1 Cleaning

Daily cleaning and maintenance will extend the lifetime of both the machine and the attachment.

Clean the Hedge cutter with water when required. Avoid high pressure cleaning of the snap couplings.

Wipe snap couplings clean with a cloth. (Picture 1)



Cleaning the couplings

3.2 Maintenance

Check all the bolts and tighten if required after a few hours of operation, and one every season thereafter.

Lubricate blades and blade holders every two hours. (Picture 2)

Lubricating nipples on all moveable parts must be re-filled at least once every season. (Picture 3)

Defective blades must be replaced immediately. This ensures effective trimming and reduces wear and tear on the Hedge cutter.

Blade replacement must only be carried out by an authorised Egholm dealer



Lubricating blade



Lubricating nipples

Conditions

**Honest
Machines**

4.1 Warranty

The warranty period for the materials and manufacture of this Hedge cutter is 12 months from the date of purchase. In case of errors or defects on the machine within the warranty period, Egholm will carry out the necessary repairs without charge for materials and working hours in accordance with the terms and conditions listed below.

The scope of warranty

1. The Egholm warranty is only valid on presentation of the original receipt, supplied with model description, serial number and date of purchase.
2. Regular checks, adjustments, services and technical alterations are not covered by the warranty.
3. All inquiries concerning the warranty are to be addressed to the distributor from whom the machine was purchased.
4. This warranty does not cover faults and defects which cannot be traced back to defects in material or production errors.
5. This warranty is valid for persons who have legally acquired the machine within the warranty period.
6. In the event of failure to perform and substantiate service in accordance with the applicable instructions, Egholm reserves the right to reject any claim made within the warranty period.
7. Egholm reserves the right to make improvements and design-related alterations to the machine without being obliged to modify previously delivered models in relation hereto.

The warranty does not cover

- Wear and tear, accidents, damage to the equipment caused by operating errors, changes to the construction of the machine or use of non-Egholm spare parts or attachments.
- Machines with illegible serial numbers.
- Damage caused by force majeure such as lightning, flood, fire, war, civil disturbance, etc. or other causes over which Egholm has no control.

Conditions

4.2 Complaints

All inquiries regarding the machine should be made at the distributor from whom the machine was purchased. This applies to inquiries concerning normal use, service, maintenance and spare parts, as well as to any complaints.

We wish you many years of safe and satisfied use of your machine.

Best regards
Egholm A/S

4.3 Disposal

Many years from now, when your Hedge cutter has reached the end of its working life, it should be disposed of in a responsible manner that conforms with relevant disposal regulations.

1. Waste hydraulic oil must be disposed of at an approved waste disposal facility or site.
2. Remove all plastic and rubber parts and dispose of.
3. After the parts mentioned have been removed, the machine is ready to be handed over to one of your local approved scrap merchants.

Honest Work.

Egholm A/S
Transportvej 27
7620 Lemvig, Denmark
T.: +45 97 81 12 05
www.egholm.eu - info@egholm.dk